


If there is an existing sump pump lateral, contractor will connect to the existing pipe, otherwise pipe will be capped at location shown

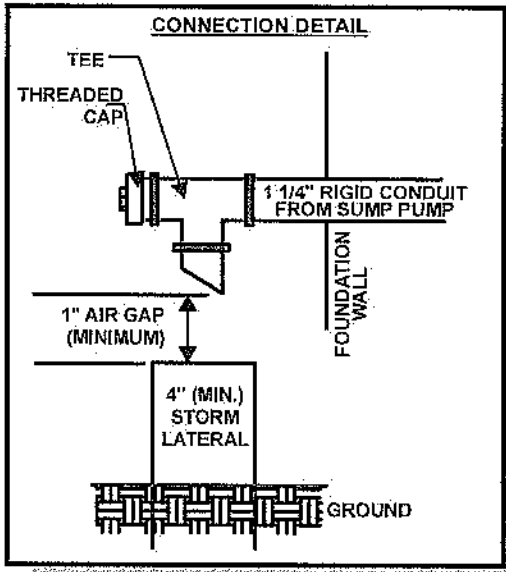

**GENERAL COMMENTS**

1. EXCAVATE MINI-STORM SEWER LATERAL FIRST TO VERIFY DEPTH PRIOR TO INSTALLING THE LINE TO THE HOME.
2. LATERAL PIPE IS REQUIRED TO BE SCH. 40 (RIGID) RATHER THAN FLEXIBLE.

**STORM  
CONNECTION DETAIL**